


SYE INSTALLATION

Remove the stock drive shaft.

For a 96 and older remove the output shaft tail cone.

Measure the inside of the yoke and note the measurement.

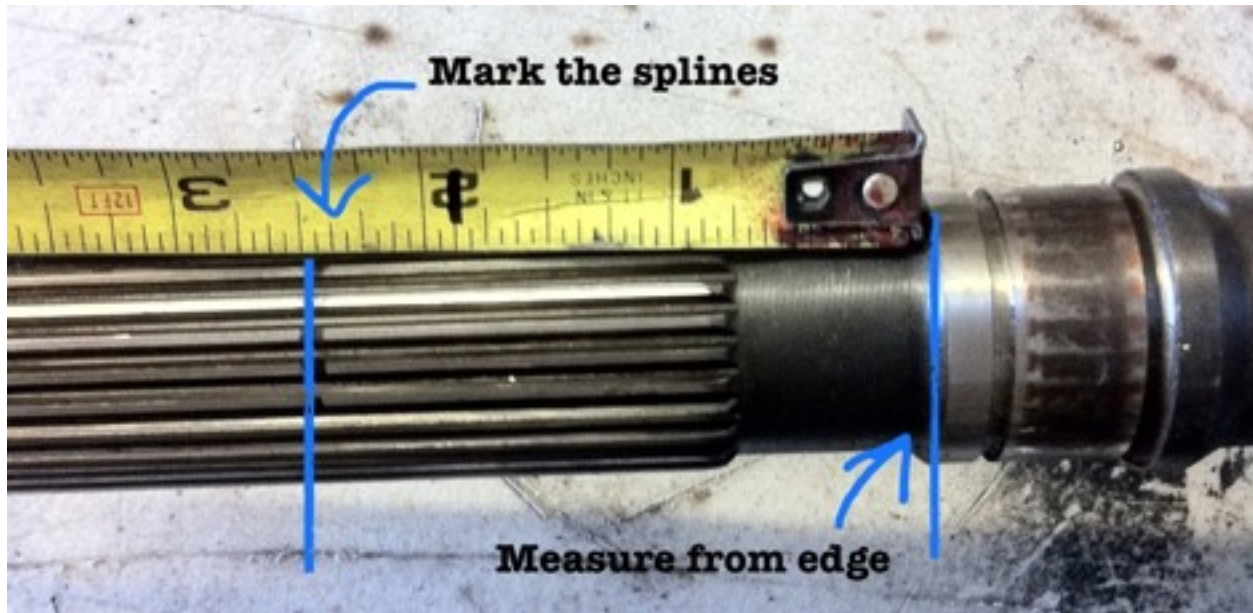

SYE INSTALLATION



Block the front and back wheels and make sure you are in 2WD, turn the engine on and put the transmission in reverse.

With the engine running and trans in reverse use a angle grinder and cut off wheel to cut the output shaft at your mark.

after cut use the grinder wheel to make a center depression.

Now use the included drill bit and cutting oil or WD40 to drill the center hole. Again with the engine running and this time transmission in drive.

After the hole is drilled turn the engine off and use the included Tap to thread the hole, go in 1/4 turns and DO NOT force it, if it feels to hard back it out and clean the hole from debris and go again.

Clean the hole after it is threaded and then bolt the yoke to the shaft, use red locktite and check the bolt again periodically.